



Superior insight | Better decisions | Healthier turf

# Change the POGO Wi-Fi Name

## Required Equipment

- POGO Pro

## Changing the Wi-Fi Name

1. Turn on the POGO Pro.
2. Connect to the Wi-Fi network *Default\_?* on your mobile device.
3. Open a web browser.
4. Type 192.168.1.1 and press Enter.
5. Tap English in the upper right corner of the page to change the language to English.
6. Tap Setup from the menu bar.
7. Select Wireless Mode and set it to Access Point.
8. Select SSID and enter: POGO “serial number.” For example, POGO 123456. This sets the Wi-Fi name to the serial number. Make sure that POGO is completely capitalized and there is a space between POGO and the numbers.
9. Tap Save at the bottom of the screen.
10. Select OK on the prompted pop-up box.
11. Tap Reboot next to the Save icon.
12. Connect to your POGO Pro on the Wi-Fi setup page.

